



Visit us @ pyleaudio.com

PLRNV71



7" Single DIN In-Dash Motorized Touch Screen TFT/LCD Digital Monitor
w/ MP4/USB/SD-Slot Card/ AM/FM/Bluetooth Dial Pad/Built-In GPS/

TTS w/USA/Canada & Mexico Maps

Owner's Manual

Table of contents

Notice of use	1
Audio and Video knowledge	2
Menu operation	2
1. Radio interface	2
2. Multimedia player	3
Play SD/USB	3
3. GPS navigation system(option)	4
4. Bluetooth(option)	5
5. TV function(option)	5
6. iPod(option)	5
Remote control	6
Troubleshooting	7

Thank you for choosing Pyle Audio, please be sure to read this manual carefully so that you will be able to operate this unit properly in a safe manner. Please keep this manual in a safe place for future reference.

Notice of use



Attention: Before installation, please carefully read all the instructions. Car audio professional guidance is recommended for the installation.




This model fits automobile 12V power supply system(ground wire should be connected). Please do not install it directly in truck or bus with 24V power supply, otherwise will cause damage to the machine.



Original disc is required. Please do not use non-standard or inferior disc, otherwise may cause machine malfunction or serious impact on its service life.



Replacement of power fuse without professional instruction is prohibited. The improper use of fuse will cause machine damage or a fire.



Do not place the unit in moist and humid conditions to avoid electric shock, damage and fire caused by short circuit.



Do not touch the screen with hard objects.



Attention: To avoid short circuit, please disconnect Battery before installation.

Audio and Video knowledge


Disc types	Content	Disc size
DVD	Sound & Picture	12cm
VCD	Sound & Picture	12cm
CD	Sound	12cm
MP3	Sound	12cm
MPEG -4	Sound & Picture	12cm
USB	Sound & Picture	12cm
Notice: This product supports VCD discs of 1.0/1.1/2.0/3.0 version		

Radio

This product is built-in high quality AM/FM/RDS radio receiver, which supports AM/FM auto search function, frequency display, etc.

1.  ---Short press this button to upward adjust the station gradually; Long press this button to upward search the station semi-automatically.
2.  --- Short press this button to downward adjust the station gradually; Long press this button to downward search the station semi-automatically.
3. **BAND** --- Press this button to switch radio bands.
4. **ST** --- Single track. In FM band, press this button to switch between ST and MONO. The default setting is ST. AM band doesn't have this function.
5. **LOC** --- In FM band, press this button to switch between LOC and DX. The default setting is DX. AM band doesn't have this function.
6.  --- Short press this button to scan the stations in prestored memory; Long press this button to automatically search station and save the searched stations into the prestored memory.
7. Both sides are for prestored station memory. Short press any station number of this memory, it will play the station that you chose; Long press any station number, the current station frequency will be restored.

Multimedia player

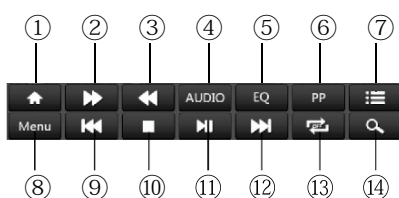

- | | |
|--------------------------|--------------------------|
| 【1】 ...Home Page | 【8】 ...Disc Menu |
| 【2】 ...Fast Forward | 【9】 ...Previous |
| 【3】 ...Fast Backward | 【10】 ...Stop |
| 【4】 ...Soundtrack Switch | 【11】 ...Play/Pause |
| 【5】 ...EQ | 【12】 ...Next |
| 【6】 ...PP | 【13】 ...Cycle Play |
| 【7】 ...Disc Tracks | 【14】 ...Select Time-play |

★Play USB/SD

The system will directly enter into USB/SD play mode after connecting USB/SD card. If the system already connected with USB/SD, click USB or SD CARD icon, to enter into USB or SD play relevantly.



VIDEO file



AUDIO file



Jpeg file

GPS navigation system(option)

★Cautions:

1. Be careful when using GPS system. The functions of this system is for navigation reference only, so please do use it for accurate measurement of the position, distance, location, terrain, etc..
2. During the first GPS satellite positioning, please stay in one location, please remain in an open area without any obstruction of signal. It may need a few seconds to position, depending on the environment and satellite signal strength.
3. For your driving safety, please finish the navigation setup before going out on the road. Please do not operate the system when driving because it may lead to a traffic accident if the area ahead is neglected!
4. When passing through the tunnel, in an underground parking/building, in underpass, climatic factors, or surrounding tall obstacles, nearby mobile phone base stations, satellite signal reception quality will be affected, the system may be temporarily unable to provide you with positioning and navigation. After you have left the sources of obstruction, the unit should quickly restore the positioning and navigation.
5. Please note that any wireless telecommunication products, are likely to interfere with satellite reception, resulting in signal reception instability.
6. GPS navigation is for reference only. The road conditions may vary and your route should be according to the traffic present. Please be sure to follow the current road situation and traffic rules.
7. Before using GPS, pls set the GPS path correctly. Pls choose '.exe' file and then click ☒



Bluetooth(option)

This device has bluetooth and hand free function. If your mobile has bluetooth function, it can set up point-to-point connection with this device. Phone call and music play functions etc.

1.  Search Bluetooth device
2.  Pairing. Before pairing, your mobile will be prompted for a password
(default password is 0000).
3.  Disconnect
4.  Dialing
5.  Phone book
6.  Call records
7.  Settings
8.  Bluetooth music
9.  Delete phone book records
10.  Download phone book
11.  Voice switch between phone and car multimedia player
12.  Search for phone number

TV function(option)

The system is built-in TV function. It supports TV signal inputs of all colour and sound systems

IPod(option)

This system supports IPod audio..

Remote control

Key name Function

- 【1】 MODEMode conversion
- 【2】 EJECTKey for ejecting/suctioning disc
- 【3】 OPENKey for opening and closing screen
- 【4】 Power switch on/off key
- 【5】 1.2.3.4.5.6.7.8.9.0Numeric key
- 【6】 VOL+ VOL-Increase/decrease volume
- 【7】 MUTEMute key
- 【8】 UP DNScreen angle adjustment
- 【9】 SETUPEnter system setting menu
- 【10】 INFODVD information, GPS shortcut key
- 【11】 Repeat single/folder
- 【12】 MENUSystem main interface
- 【13】 RANRandom play switch
- 【14】 SCANScan play
- 【15】     OKleft/right/up/down to select and confirm. When playing disc, left/right is to control last/next
- 【16】 SRCHSearching play
- 【17】 ZOOMUnder DVD mode, key for image zoom
- 【18】 SLOWSlow down from 1/2 to 1/7
- 【19】 Play/pause
- 【20】 Stop
- 【21】 ANGLEUnder DVD mode, key for switching angles (supported by dirc)
- 【22】 PICDisplay screen brightness, contrast, color adjustment key, to be used in conjunction with direction key
- 【23】 SUB-TSubtitles selection
- 【24】 AUDIOLanguage selection



Troubleshooting

Phenomenon	Reasons	Solutions
Not operating	The inline fuse leading to the power supply of the vehicle is burnt. Voltage of power supply is overloaded; Automatic system protection triggered due to illegal operation	Change the fuse with the correct type; Adjust voltage; Reset the system by pressing the Reset key
No or low sound	Disconnection; Volume setting is low volume; Loudspeaker fault Big deviation of volume balance setting; Earthing in loudspeaker connection	Check the connection; increase volume Adjust the volume balance setting to middle place; Keep insulation of loudspeaker connection
Remote control doesn't work	Battery is out of power; Battery is not placed correctly	Change new battery; Reinstall battery;
Inferior quality of sound; Distortion of sound	Inferior disc is prohibited; Loudspeaker does not match impedance of the machine; Speaker fault	Use genuine discs; Change a matched loudspeaker; Check the connection of loudspeaker
Machine reset by itself when it is shut down	Connection of ACC and B+ is not correct.	Check and reconnect ACC and B+
No image	Connection of brake wire is not correct; Not braking state.	Check brake wire and connect them correctly; Keep braking state after the car is placed safely.
Unstable output of image	DVD does not correspond with the present system video setting; Video signal line is not connected correctly.	Adjust system video setting; Check and replace video signal line.
Image stretching or compressing	Incorrect ratio settings of icons	Use correct ratio settings of icons
Weak signal	Auto antenna does not reach out completely LOC function is under working state.	Connect auto antenna line correctly Close LCC function



Visit us @ pyleaudio.com

IMPORTANT: Pack carefully in original package if possible. We are not responsible for damage incurred in returning items for repair. A letter stating your exact street address, daytime phone number, and the problem you are experiencing should be included. You must also enclose a copy of the original receipt as proof of date of purchase

Brooklyn, NY 11204

(718)535-1800

Monday Through Thursday, 9AM to 5PM

Friday 9AM to 1PM Eastern.